

Steve's Station® - Imaging

Technical Specification Sheet



		Steve's Station Deluxe	Steve's Station Advanced	Steve's Station Standard
				
Styles and Sizes		Choose a Single Surface or Dual Surface style in 60" or 72" width.	Choose a Single Surface or Dual Surface style in 60" or 72" width.	Choose a Single Surface or Dual Surface style in 60" or 72" width.
Tilt		Dual Surface tables have a tilting keyboard surface.	Dual Surface tables have a tilting keyboard surface.	Dual Surface tables have a tilting keyboard surface.
Monitor Control	Height Adjustment	Adjusts electrically with the rear worksurface.	Adjusts electrically with the rear worksurface.	Optional articulating arms.
	Depth Adjustment	Manual Monitor Easy Track™ glides smoothly on ball bearings.	Manual Monitor Easy Track™ glides smoothly on ball bearings.	Optional articulating arms.
Monitor Configurations		Holds up to 6 monitors in a single line.	Holds up to 6 monitors in a single line.	Holds up to 6 monitors on articulating arms (up to 375 lbs.)
Sit/Stand Height Range	adjusts electrically as high as	49"	49"	49"
	adjusts electrically as low as	23"	23"	23"
Ambient Lighting		Ambient light levels can be adjusted manually with the dimmer.	No ambient lighting.	No ambient lighting.
Number of CPUs the table can hold		2	2	2
Acoustic Barrier		29.5" high fabric-covered privacy screens.	No acoustic barrier.	No acoustic barrier.
Cable Management		The Cable Management System allows users to move the table from its lowest to highest point without unplugging the system.		A rear cable trough runs the width of the table.
Maximum Lift Capacity		250 lbs.	325 lbs.	375 lbs.
Overall Weight Capacity		250 lbs.	325 lbs.	375 lbs.
Programmable Height Presets		3 programmable presets.	3 programmable presets.	No presets.
Integrated Task Lights		2 on the worksurface.	2 on the worksurface.	No integrated task lights.
Ships assembled		Yes.	Yes.	Yes.
USB Hub on the worksurface		2 ports on the worksurface.	2 ports on the worksurface.	No USB ports.
Electric outlets		3 outlets on the worksurface; 12 outlets in the cable trough.	3 outlets on the worksurface; 11 outlets in the cable trough.	No integrated outlets.
Comfort Fan		1 on the worksurface.	1 on the worksurface.	No comfort fan.
Safety Limit Switches		Sensors are located under the worksurfaces to prevent injury and equipment damage when adjusting the table.		
Warranty		All Steve's Stations have a Lifetime Warranty against manufacturing defects on the table and a 2-year warranty on the electrical system. Lamps, cords, and plugs are not warranted.		



For more information on our Steve's Station® family, give us a call or drop us a note.

800.325.3841 | sales@anthro.com