Step 7

Place the Bench Shelf (laminate facing down) onto the floor.

With the help of another person, carefully rotate the Base Assembly (from Step 6) over onto the Shelf.


Position the holes on the Pans and Arms to align with the twelve predrilled holes on the Shelf. Insert two Button-hd PB Screws through each center opening of the Bench Pans (shown encircled at right).

Install the remaining PB Screws into each of the Arms and Pans. A total of twelve PB Screws will be installed.

If a drawer and/or keyboard caddy are a part of this configuration, install them now using their instructions. If the 5" caster upgrade is part of this configuration, remove the glides and install the casters now.

With the help of a buddy, carefully rotate your AnthroBench right side up.



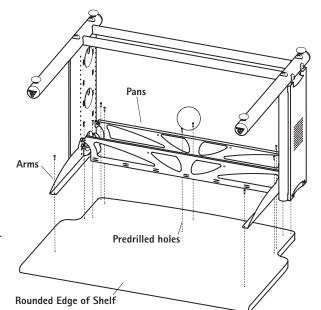

Step 8 (requires a 3-Way Wrench)

FIRST- from the rear of your Bench, align one Buttress with one hole on the Back Pan. Install a Pan Screw through the Buttress and loosely capture using a Keps Nut on the opposite side

SECOND – position one Cross End on the remaining Buttress end and install a Pan Screw and Keps Nut in the same manner, but do not fully tighten.

<u>THIRD</u>- rotate the Buttress to align the Cross End with two openings on the Leg. Secure the Cross End to the Leg using two Support Screws.

Repeat this entire procedure for the remaining Buttress and Cross End on the opposite end.

Tighten all Pan Screws, Support Screws and Keps Nuts.

Congratulations! Your 60" AnthroBench assembly is complete. Please return the enclosed Registration Card to receive our product updates, new catalogs, and sale flyers.

Thank you for choosing Anthro!



(1/4-20 X .5") Pan Screw 325-5003-00


Questions?



(¹/4-20) Keps Nut



Support Screw



THIRD Install the Cross End

Buttress

Removal of Leg Covers and Cable Grommets


Remove the Leg Cover by: 1. First removing the top two Workstation Screws. 2. Slightly lift the Cover upward and off the lower metal mounts.

Cable Grommets are snapped into and out of each of the circular Leg openings.



Back Pan hole

FIRST Install this Pan Screw

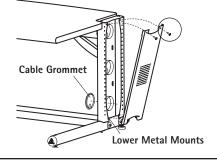

SECOND Install this Pan Screw




1-800-325-3841

60" AnthroBench II

Assembly Instructions



These Assembly Instructions are for the 60" AnthroBench models. Before beginning assembly of your AnthroBench, please take a moment to review the parts listed below to verify that your shipment is complete.

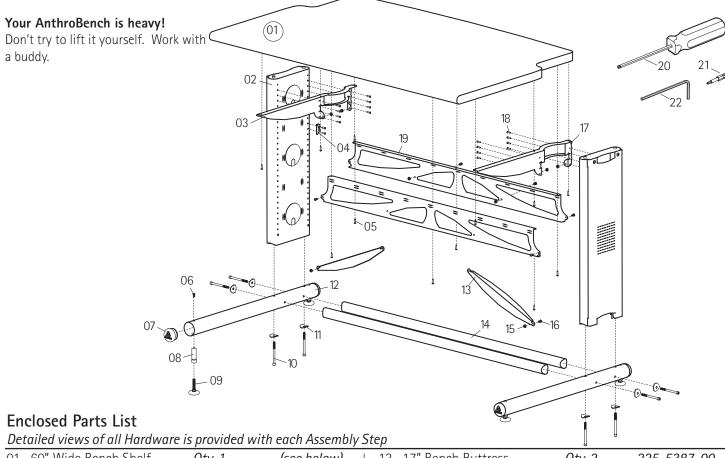

01 – 60" Wide Bench Shelf
28" Deep (ABS6029zz-xx and ABS6035zz-xx) 101-1125-00-00
36" Deep (ABD6029zz-xx and ABD6035zz-xx) 101-1118-00-00
02 – Bench Leg Assemblies
25" Bench Legs (ABS6029zz-xx and ABD6029zz-xx) 835-5008-00
31" Bench Legs (ABS6035zz-xx and ABD6035zz-xx) 835-5009-00
03 – Bench Arm Left
04– Cross Ends
05– 1" Button-hd PB Screw <i>Qty. 12325–5580–00</i>
06- Glide Insert Screws
07– 2.5" End Caps
08- Glide Inserts
09 – Glides (¹/₂-13 X 2")
10- Cap Screws (5/16-18 X 4")Qty. 8325-5166-00
11 – Curved Washers
12- Bench Base Tubes
28" Deep (ABS6029zz-xx and ABS6035zz-xx) 125-5225-00
36" Deep (ABD6029zz-xx and ABD6035zz-xx) 125-5183-00

rp	<u>U</u>	
13- 17" Bench Buttress	Qty. 2	225-5387-00
14- 53.5" Bench Cross Tubes	Qty. 2	125-5185-00
15- Keps Nuts (1/4-20)	Qty. 8	325-5130-00
16- Pan Screws (1/4-20 X .5")	Qty. 8	325-5003-00
17- Bench Arm Right	Qty. 1	225-5358-00
18 - Support Screws	Qty. 20	325-5010-00
19- 60" Bench Pans	Qty. 2	225-5371-00

All Screw quantities listed here are the minimum needed for your Bench assembly. There may be a few extra Screws included, which are not counted in the Parts List.

To make the assembly of your Anthro Bench even easier, we have included the required tools. The handy Hex Driver Bit can be used in your electric drill in place of the Hex Driver.

20 - Hex Driver ⁵ / ₃₂ "	Qty. 1	375-5000-00
21 - Hex Driver Bit ⁵ / ₃₂ "	,	
22 - Hex Key ¹ / ₄ "	Qty. 1	375-5024-00
3-Way Wrench (not shown)		

Anthro Corporation Technology Furniture® 10450 SW Manhasset Drive Tualatin, Oregon 97062

November 2013 SAVE THESE INSTRUCTIONS! anthro.com

60" AnthroBench II


Assembly Instructions

Questions? 1-800-325-3841

Step 1

Install two Bench Glide Inserts into each Bench Base Tube and secure with one Insert Screw per Insert.

Pop two End Caps into the ends of both Base Tubes.

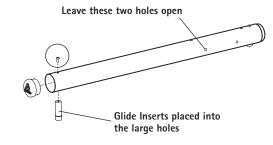



Step 2

Orient one Bench Leg Assembly with one Base Tube Assembly (from Step 1). The Glide Inserts should be facing down.

Insert one Bench Cap Screw through one Curved Washer, then carefully insert through one of the lower holes on the Base Tube, threading into the Right Leg Assembly.

Repeat this procedure for the remaining three lower holes on the Right and Left Leg Assembly.


If you are installing Bench Glides, install them now by threading one into each Glide Insert. If you are upgrading to 5" Casters, install them now following their enclosed instructions.



(5/16-18 X 4") Bench Cap Screw 325-5166-00



Curved Washer 225-2050-00 or 225-3522-00

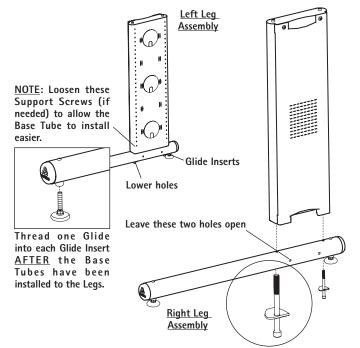

Step 3

Position the Right Leg Assembly (from Step 2) with two Cross Tubes as shown. Insert one Bench Cap Screw with a Curved Washer through a side hole, carefully threading the Screw into the Cross Tube.


Repeat entire procedure for the remaining three side holes.



325-5166-00



Curved Washer 225-2050-00 or 225-3522-00

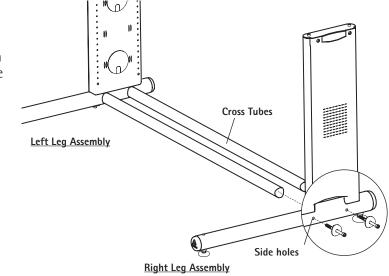


Step 4

Determine the desired height of your Shelf. This instructions will place the shelf at the top of the legs, either 29" or 35" from the floor (depending on which height Bench you purchased). If you install 5" casters on your bench, they'll make your Bench 5" taller.

The holes along the Leg Assemblies are spaced at 1" increments. Adjusting either one hole up or down will modify the final Shelf height by 1" respectively. Rotating the Glides will also provide additional height adjustment.

NOTE: Your Shelf height can be adjusted at a later time if needed by following Steps 5-8 below.

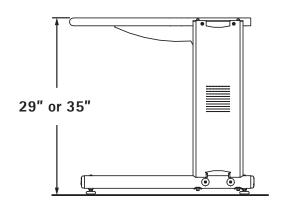

REMINDER: You may want to measure your equipment to make sure it fits into the selected Shelf location


Step 5

Position the Left Bench Arm onto the Left Leg Assembly.

Align the top two openings of the Arm with Hole 2 of the Leg Assembly. Loosely install a Support Screw through the top two holes of the Arm into the Leg.

Install the remaining six Support Screws into the Left Arm, but do not fully tighten any of the Support Screws.

Repeat entire procedure for the Right Bench Arm on the Right Leg Assembly.

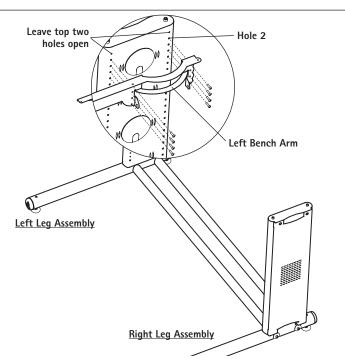



Step 6 (requires a 3-Way Wrench)

Position a Bench Pan between the Arms, aligning the two tabs on each Arm with the two holes in the lower corners of a Pan. Insert a Pan Screw through the Pan and Arm Tab- capturing it with a Keps Nut (but do not fully tighten). Repeat this procedure for the remaining end of the Pan and for the second Pan.

Tighten all Pan and Support Screws.

NOTE: the 3-Way Wrench can be used to assist in tightening the Keps Nuts.



325-5003-00





